

# EXTECH® HW30 USER MANUAL

## Description

1. Start/Stop button
2. Mode button
3. Recall button
4. Lap/Split/Reset button
5. Display (LCD)



## Cautions

- This device is not a toy and must not reach children's hands. It contains hazardous objects as well as small parts that the children could swallow. In case a child swallows any of them, please contact a physician immediately
- Do not leave the battery and packing material unattended; they can be dangerous for children if they use them as toys
- If the device is going to be unused for an extended period, remove the battery to prevent draining
- Expired or damaged batteries can cause cauterization on contact with the skin. Always, therefore, use suitable hand gloves in such cases
- See that the battery is not short-circuited. Do not discard the battery into a fire.
- See additional battery warnings on the next page.

## Battery Replacement

Remove the screws from the back of the watch to open unit and battery compartment. The battery is a round button cell CR2032. Removing and replacing the battery will cause loss of all settings. Make sure the gasket seal is properly seated before replacing back cover and tightening screws.

## Specifications

Accuracy (Watch)	±5 seconds/24 hours
Accuracy (RH)	±5% (33 to 75% RH), ±7% (1 to 32% and 76 to 99%)
Accuracy (Temp)	±3°F (1.5°C)
Temperature	14 to 122°F (-10 to 50°C)
Resolution	0.1/ 1 °C or F
Update Rate	5 seconds in Heat Index Mode, 2 minutes otherwise
Heat Index	70 to 122°F (22 to 50°C)
Humidity	1 to 99% RH
Memory	30 Laps / 30 Splits
LAP Counter	99 Laps
Battery	CR2032
Dimensions	3.1 x 2.6 x 0.8 in. (79 x 66 x 23 mm)
Weight	3 oz. (85 g) with battery

## Operation

### Mode Selection

The HW30 Heat Watch has six operating modes.

Press the MODE button to switch modes.

The HW30 will remain in the Heat Index mode for two minutes and then revert to the clock mode.

### Time Date Mode

The time date display shows current time, day of week, date and month. The alarm and heat index alarm indicators are also shown when they are activated.

### Time and date set

Press and hold the RECALL button for 3 seconds to set time and date.

Press START to zero seconds.

Press LAP to select minutes, Press START to change minutes.

Press LAP to select hours, Press START to change hours. Press LAP to select minutes, Press START to change minutes.

Press LAP to select year, Press START to change year.

Press LAP to select month, Press START to change month.

Press LAP to select date, Press START to change date.

Press LAP to select 12H/24H, Press START to change.

Press RECALL to exit time set mode.

The HW30 will return to display mode after 30 seconds of inactivity.

### SETTING UNITS OF MEASURE

From heat index mode screen, Press LAP to change unit of measure (°F or °C)

### HEAT INDEX MODE

In heat index mode the HW 30 displays relative humidity and ambient temperature (in °F or °C). The HW30 also calculates and displays Heat Index.

### HEAT INDEX ALARM SET

The HW30 Heat Watch has a user settable heat index alarm.

The Heat Watch will emit a 20 second audible warning when the heat index reaches the level

previously set by the user.

 
To set the alarm:

From heat index mode screen, Long press RECALL for 3 seconds

Press START to scroll up or LAP to scroll down

Press RECALL to save and exit setup mode, or Press START if the alarm level has already been set.

The alarm can be stopped by pressing any of the four buttons.

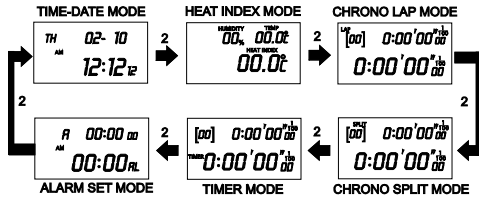

### STOPWATCH LAP MODE

Before using be sure to reset stopwatch to 0.00.00.00.

The HW30 Heat Watch lap mode has advanced features that will make the timing of events or training sessions easier and more enjoyable.

#### 1. Lap Indicator

The lap indicator flashes to indicate the lap in progress up to 99 laps.

When LAP is pushed, the lap indicator and lap time displays (top line of display) freeze for ten seconds before resuming and displaying next lap.

Bottom display always shows cumulative time

#### 2. Fastest Lap/Slowest Lap/Average Lap Recall

Once timing session is complete, press RECALL button to review fastest lap, slowest lap and average lap times. (based on 99 laps)

Then press START to review individual lap times. (30 laps)

 
Lap times are shown on top line of the display.

Split times are shown on the bottom line of the display.

#### 3. Memory

The HW30 Heat Watch memory can store up to 30 lap (and split) times.

Reset lap memory – Press Lap/Split/Reset

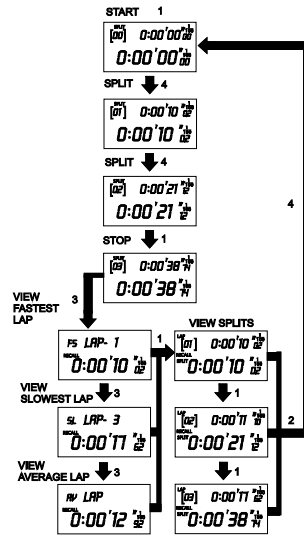

### STOPWATCH SPLIT MODE

Before using be sure to reset stopwatch to 0.00.00.00.

The HW30 Heat Watch split mode has advanced features that will make the timing of events or training sessions easier and more enjoyable.

#### 1. Split time indicator

When SPLIT is pushed the split indicator and split time displays (top line of display) freeze to indicate the current split time.

Bottom display continues to always show cumulative time.

#### 2. Fastest Lap/Slowest Lap/Average Lap Recall

 
Lap Recall

Once timing session is complete, press RECALL button to review fastest lap, slowest lap and average lap times. (based on 99 laps)


Then press START to review split times. (30 splits) Split times are shown on the bottom line of the display. Lap times are shown on top line of the display.

#### 3. Memory - The HW30 Heat Watch memory can store up to 30 split (and lap) times.

Reset split memory – Press Lap/Split/Reset

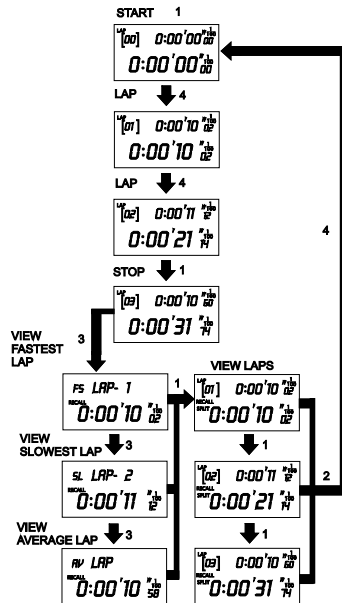

### TIMER MODE

 

The HW30 Heat Watch timer mode is a user programmable countdown timer.

The maximum count down time is 9 hours 59 minutes and 59 seconds. The minimum settable time is 1 second.

Press START to begin the countdown

 
Press STOP to stop the countdown

The timer will count down for the selected duration.

The watch will emit an audible warning during the final 5 seconds of the countdown.

The countdown will repeat itself until stopped by the user. The countdown sequence will repeat itself and increment the count by one each time it resumes.


The alarm can be stopped by pressing any of the buttons

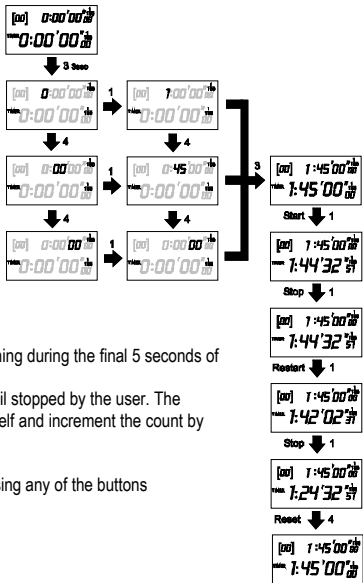

### ALARM MODE



 The alarm will ring for 30 seconds.

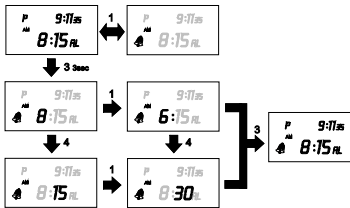

Copyright © 2024 Teledyne FLIR Commercial Systems, Inc.

All rights reserved including the right of reproduction in whole or in part in any form

 
[www.extech.com](http://www.extech.com)



**WARNING** : Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.



- **INGESTION HAZARD** : This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns in as little as 2 hours.**
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN.**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.

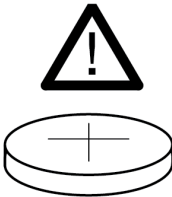

**WARNING**

- a) Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- b) Even used batteries may cause severe injury or death.
- c) Call a local poison control center for treatment information.
- d) The compatible battery type: CR2032.
- e) The nominal battery voltage: 3.0 V DC.
- f) Non-rechargeable batteries are not to be recharged.
- g) Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- h) Ensure the batteries are installed correctly according to polarity (+ and -).
- i) Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- j) Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- k) Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.