


USER MANUAL

Moisture Probes

MODELS MR06, MR07, MR08

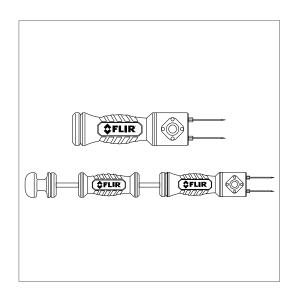

 
Introduction

Thank you for selecting the FLIR Moisture Meter Probe MR06 (wall cavity probe), MR07 (hammer probe), or MR08 (hammer/wall cavity combination). Connect the probe to a FLIR moisture meter to measure moisture in wood & other building materials.


Safety Instructions

- This device should be used only for purposes outlined in this manual. Misuse may cause damage to the probe and/or external devices, and can cause personal injury.
- Keep the probe packed when not in use.
- Do not allow children to handle the probe or the pins.

MR06 Wall Cavity Probe Description



MR07 Hammer Probe Description

 

- Knob handle
- Strike areas
- Slide hammer
- BNC cable iack
- Pin probe head
- 6. Removable probe pins
- Detachable RJ45 to BNC connector.

Note: MR08 kit assembly includes all MR06 & MR07 components

Operating Instructions

- Carefully remove the probe and pins from the packaging (extra pins are provided).
- Screw the pins into the probe and use the supplied wrench to securely tighten.
- Connect the probe to the moisture meter using the supplied BNC/RJ45 cable (BNC connection on probe and RJ45 connection on FLIR moisture meters).
- Position the pins on the material under test.
- Drive the pins into the material under test using the sliding hammer action force to assist (MR07 & MR08). For the MR06 use a hammer or other tool to drive the probe pins.
- Operate the FLIR moisture meter as described in the user manual supplied with the meter.

Specifications

Cable Length	8 ft. (2.45 m) cable length	
Pin lengths	2, 4, or 6 in. (50, 101, or 152 mm)	
Replacement pin part numbers	MR-PINS2, 4, or 6 (2, 4, or 6 in.)	
	MR-PINS2-10 (2 in. 10-pack)	

CUSTOMER SUPPORT

Customer support and documentation downloads are available at the link below.

https://support.flir.com

Limited 3-Year Warranty

This product is protected by FLIR's Limited 3-Year Warranty. Visit www.flir.com/testwarranty to read the warranty document.



USER MANUAL

Website

http://www.flir.com

Customer support

http://support.flir.com

Copyright

© 2024, FLIR Systems, Inc. All rights reserved worldwide.

Disclaimer

Specifications subject to change without further notice. Models and accessories subject to regional market considerations. License procedures may apply. Products described herein may be subject to US Export Regulations. Please refer to exportquestions@flir.com with any questions.

Publ. No.: NAS100211

Release: AB
Commit: 96875
Head: 96890
Language: en-US
Modified: 2024-04-04
Formatted: 2024-04-04

